

NOTE
The Busher shall check all dimensions and levels on site prior to construct
The Busher shall check all dimensions and levels on site prior to construct
orderly, any errors, discrepancies or omissions to the architect. Refer to wir
dimensions only. Do not scale drawings. Drawings shall not be used
constitution purposes until issued for constitution. This drawing reflects a
constitution purposes until issued for constitution. This drawing reflects are
authorised in writing by Generaling Subboastay Architects. Only for work as
authorised in writing by Generaling Subboastay Architects.

by Saincenium accounting National State is to be used unity on work when authorised in writing by Clendenning Scobousty Architects.

All boundaries and contours are subject to survey drawing W-01. All levels to Australian Height Data. It is the contractors responsibility to confirm all measurements on site and locations of any services prior to work on site.

DRAFTING E: lee@lhdrafting.

ing.com.au

NORTH

A
P1
Issue

3/02/2025 5/01/2025 Date

DRAWING TITLE:

LOCATION PLAN

PROJECT NAME:

HAWKS NEST RESIDENCE

DRAWING SCALE:
REVISION NO.
A
STAGE.
DRAWING NO.
DRAWING NO.
DRAWING SCALE:
REVISION NO.
A
DA - A01.1